




This hinge is wrong.... Do not install the hinge pointing out.....

**THE**  
**Grate**  
**ESCAPE**

[www.GrateEscape.net](http://www.GrateEscape.net)  
[Info@GrateEscape.net](mailto:Info@GrateEscape.net)  
(509) 468 5167

### \*\* Grate Attachment

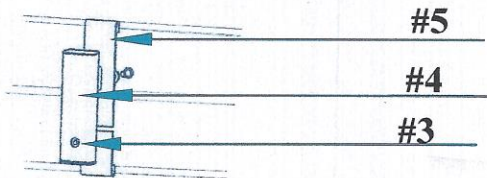

#1

Slide the **Hinge Assemblies** over the egress well. Position the hinges to allow 1.5" for wall clearance. Use an awl (nail) to mark the walls for drilling. The (#3) threaded hole will need drilling also.


\* Remove the **Hinge Assemblies** before drilling.\*

Drill the holes using a 3/8" drill bit. Loosely bolt the hinges in place.

#6

Lay the grate on the hinges and use a marker to determine the hole locations for drilling. Remove the grate and drill (4) 7/32" holes through the grate. Bolt the grate in place at this time.

### \*\* Hinge Assembly

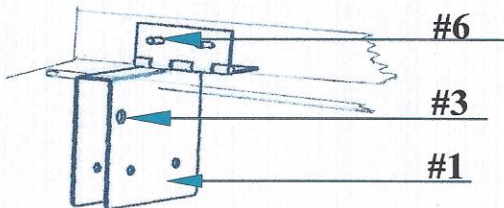


Install the lift shock into the threaded holes #3. Tighten the lift shock at this time.

Stand the grate up to check the wall clearance.

Install the **Grate Attachment** at this time. (Be sure that the small hook #4 is pointed down)

#5

Install the flat hook as shown to the underside of the grate and loosely bolt in place. Now close the grate. It will act as though there is a resistance, push it down anyway. Open the grate to check the clearance of the wall. Move the hook #4+#5 to the right or left to get the desired wall clearance.

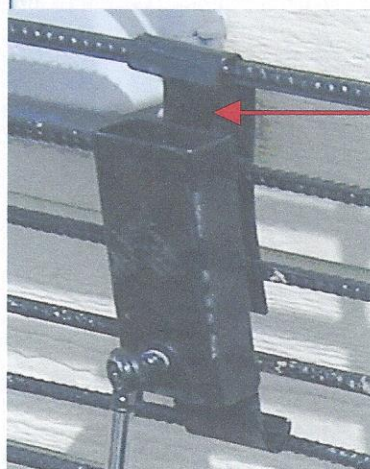

Needs to be underside

Tighten all nuts now and enjoy your easy opening escape system.

Thank You