



INSTALLATION INSTRUCTIONS

More Information:

Call 509 468 5167
GrateEscape@comcast.net
** Thank You **

Step #2


Bolt both ends of the gas shock (C) using the T40 wrench provided

Hook the underside bracket (D) to the grate (as shown) then hook the topside bracket (E) (as shown). Bolt the pieces in place.

(Do not tighten)

Upon usage, if the grate is too close to the house, move assembly to the right.

Tighten the bracket at this time.

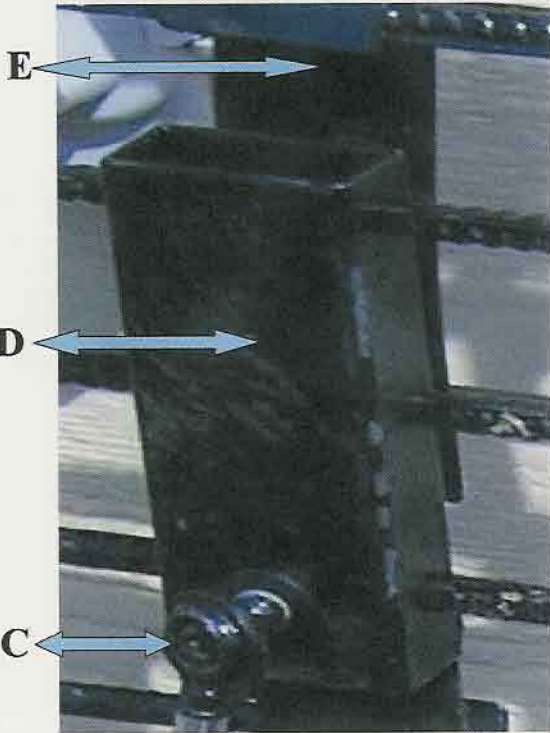

Step #1

36" of clearance is needed from reference point (A) above the top edge of the egress well.

Align points (A) (B) to the siding on the outside wall.

Pencil mark the egress well for future alignment instructions.

Seat lightly the hinge assembly using the pencil mark for reference point.

Use a sharp point (awl) to dent the egress well using the (B) holes. Remove the hinge.

Drill (2) 5/16 holes at the dents made in the egress well at this time.

Mount and bolt the hinge assembly to the egress well at this time.

(REPEAT FOR THE OTHER HINGE)

Lay the Grate on the Egress Well and secure with the nuts provided. (some grates will have to be drilled with a 1/4 drill)

